

RG206S Instruction Manual

1. Linking method:

Transmitter: Click the start button to enter the link state


Receiver: Power on, press and hold the [SET] button for 3 seconds, the orange LED flashes.

Authentication method:

Successful linking: The receiver LED light becomes green and steady

Connect the servo: Operate the corresponding channel of the transmitter, linking successfully if the servo has synchronized action.

2. Names of parts

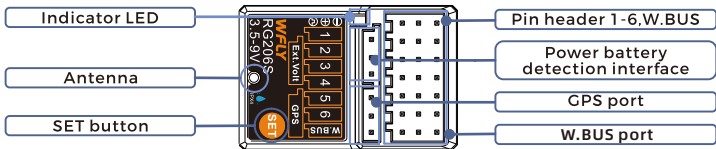

3. Receiver RGB LED status:

Color	Status	Function
Green	ON	Link successfully
Blue	Flash	Wireless upgrading mode
Red	ON	No signal
	Flash	Voltage < 3.7V
Orange	Flash	Link

4. Receiver parameters:

Model name:RG206S

Frequency band: 2.4GHz

Working voltage: 3.5V~9V

Working current: 95mA

Application: RC cars, boats, tanks, etc.

Resolution: 4096

PWM:6 channels

PPM:support

W.BUS:support S.BUS

Two way transmission:Support

Upgrade: USB online upgrade

Shenzhen WFLY Technology Development Co., Ltd

Website:www.wflysz.com