

Operation

1.Link:

Transmitter enter into link status (Linkage Setting)→(Link), Then power up the receiver.


2.Mode Select:

Set at the transmitter menu of (Linkage Setting) →(W.BUS/PPM)

LED Status List

LED	Status
Red never off	No signal
Red flash	Low voltage ($\leq 3.7V$)
Green never off	W.BUS (With signal)
Blue never off	PPM (With signal)

Interface definition

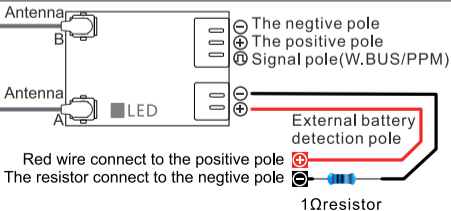

Technical Parameters

Model type: RF201S

System match: ET series radio system

Band: 2.4GHz

Voltage: 3.8V-6.5V

Current: 75mA

Resolution ratio: 4096 (PPM); 2048(W.BUS)

PPM:Support

W.BUS: Compatible with S.BUS

Two-way transmission: Support

Fail-safe: Support

External voltage detection: DC 0-36V

Dimension: 20*14mm

Weight: 1.32g